


Diagram of coolant hose connections

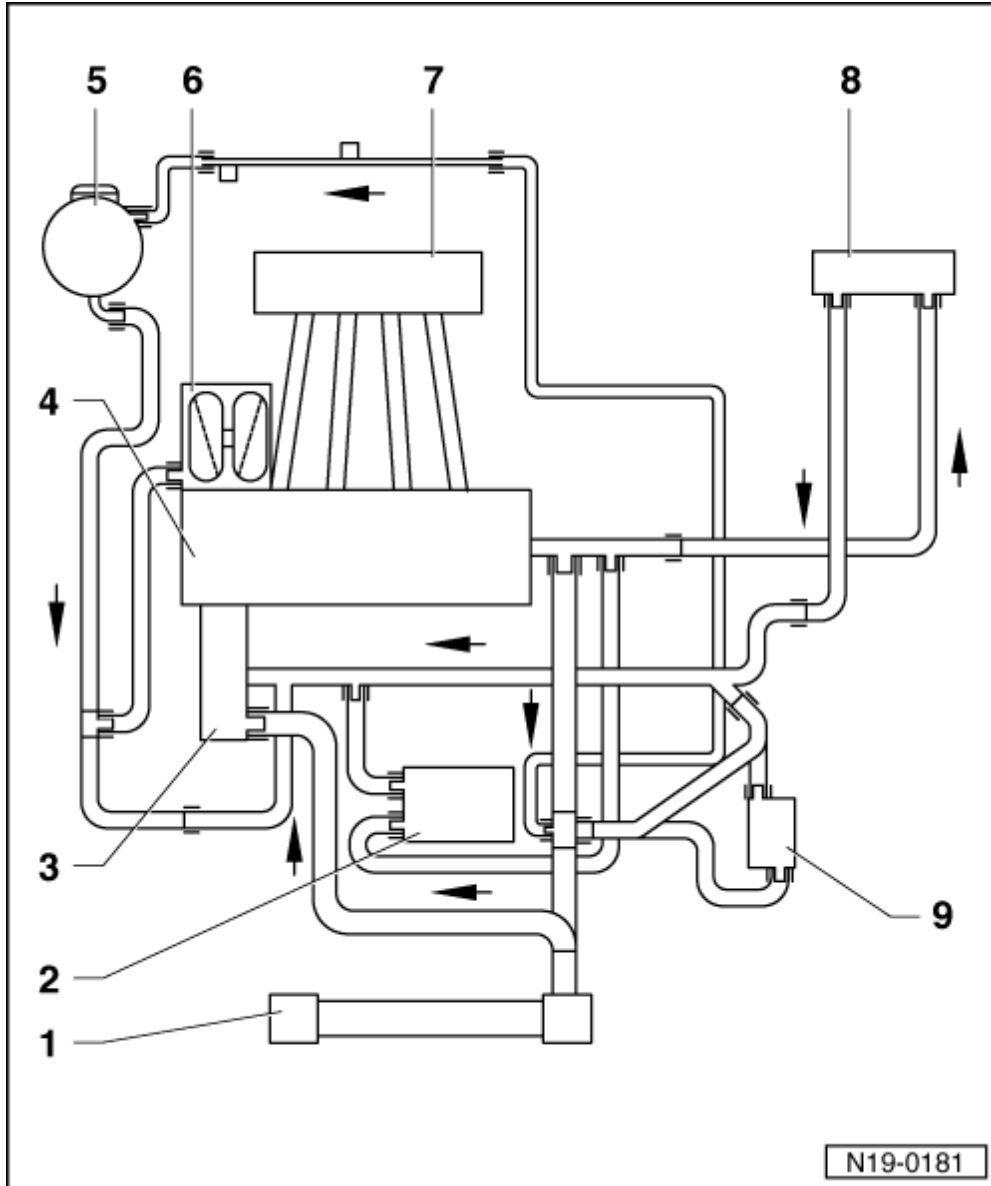

1 - Radiator

q Removing and installing → [Chapter](#)

q If renewed, refill system with fresh coolant

2 - Oil cooler

q Removing and installing → [Item](#)

3 - Coolant pump/thermostat

q Removing and installing coolant pump → [Chapter](#)

q Removing and installing thermostat → [Chapter](#)

q Checking thermostat → [Chapter](#)

4 - Cylinder head/cylinder block

q If renewed, refill system with fresh coolant

5 - Expansion tank

q With filler cap

q Checking pressure relief valve in filler cap →

N19-0181

- 6 - Turbocharger
- 7 - Intake manifold
- 8 - Heat exchanger
- q If renewed, refill system with fresh coolant
- 9 - Not fitted